HOME
DECORATORS
C O L L E C T I O N

HDC# 16655 MFG# TW-19307WE / TW-19307EO
REFLECTIONS SINGLE VANITY 35"Hx32"Wx22"D

ASSEMBLY INSTRUCTIONS

Note: 1. Before assembly, please be sure to work on a soft, flat surface to avoid any damage to the finish.
2. You need at least 2 people to finish the assembly of this product.

Made In China

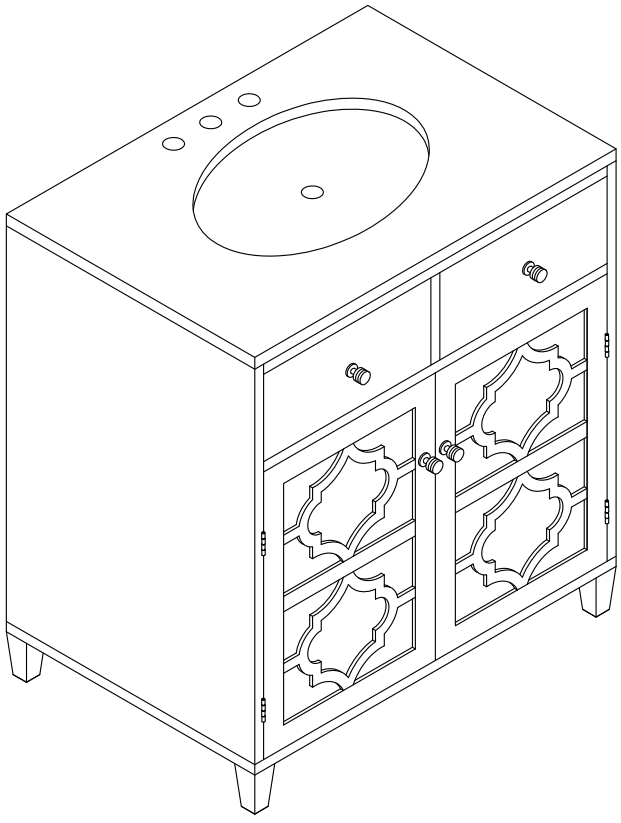

BEFORE ASSEMBLY

IMPORTANT NOTE: READ CAREFULLY BEFORE ASSEMBLY TO PREVENT DAMAGE TO PARTS. FOLLOWING INSTRUCTIONS LISTED BELOW IN THE PROPER SEQUENCE AS NUMBERED TO ASSURE FAST, EASY AND CORRECT ASSEMBLY.

ASSEMBLY TOOLS REQUIRED

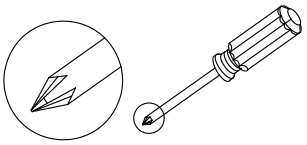

"+"Screw driver

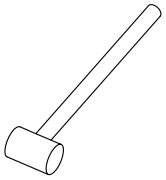

Rubber Mallet

WOODEN DOWEL INSTALLATION PROCEDURE

(1) FILL HOLE 1/4 FULL OF GLUE.
(2) GENTLY TAP DOWEL INTO HOLE
WITH RUBBER MALLET OR USE HAND
PRESS IN.
DO NOT USE HAMMER
(3) WIPE AWAY EXCESS GLUE.

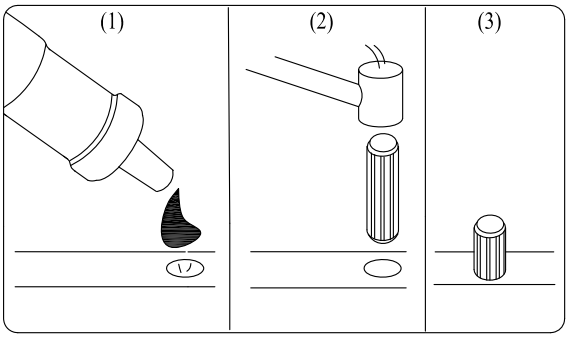

HIDDEN CONNECTOR ASSEMBLY TECHNIQUES FOR LOCK NUT & LOCK PIN

1 SET INCLUDES: (C) CAM-LOCK 1PC. (A) CAM BOLT 1PC.
TOOL NEEDED: ″+″ SCREW DRIVER
STEP 1: SCREW CAM BOLT (A) ONTO PRE-SET PLASTIC NUT ON PANEL. USE A ″+″ SCREW-DRIVER FOR TIGHTENING. ATTENTION: DO NOT OVER TIGHTEN THE CAM BOLT (A).
STEP 2: ATTACH BOTH PANELS, MAKE SURE YOU HAVE INSERTED THE CAM BOLT TO THE VERY DEPTH OF THE HOLE WITH RUBBER MALLET GENTLY, CAUTION: DO NOT USE HAMMER. THEN INSERT CAM-LOCK (C) INTO PRE-DRILLED HOLE ON PANEL, MAKE SURE THE ARROW ON CAM-LOCK (C) SET IN PANEL POINT TOWARD THE HOLE INTO WHICH THE CAM BOLT (A) HAS BEEN INSERTED AND INSERTED THE CAM-LOCK (C) TO THE VERY DEPTH OF THE HOLE.
STEP 3: ROTATE THE CAM-LOCK (C) CLOCKWISE TO SECURE CAM BOLT (A) BY TIGHTENING WITH A ″+″ SCREWDRIVER.

DETAIL STEP PLEASE SEE THE BELOW PICTURE.

VERTICAL CONNECTION		HORIZONTAL CONNECTION	
(1) (A) 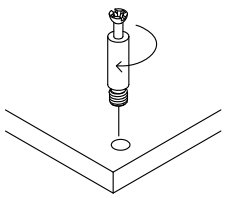	(2) 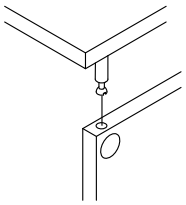	(1) (A) 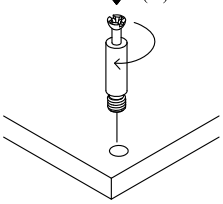	(2) 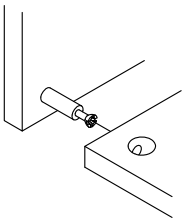
(3) 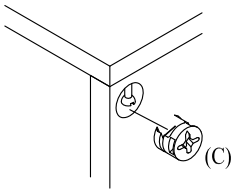 (C)	(4) 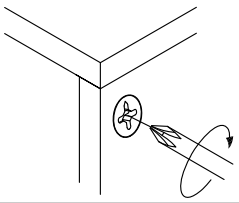	(3) 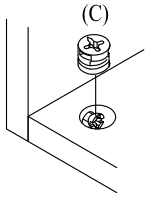 (C)	(4) 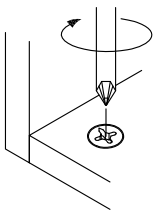
(5) 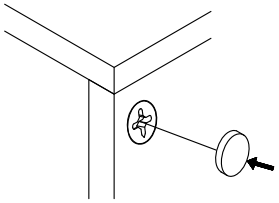		(5) 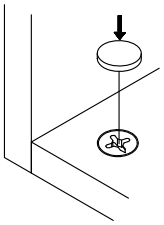	

THANK YOU FOR PURCHASING THIS QUALITY PRODUCT. BE SURE TO CHECK ALL PACKING MATERIAL CAREFULLY FOR SMALL PARTS, WHICH MAY HAVE CAME LOOSE INSIDE THE CARTON DURING SHIPMENT. COUNT ALL PARTS AND MATERIAL HARDWARE, COMPARE WITH PARTS LIST TO BE SURE ALL PARTS ARE PRESENT. IF ANY PARTS ARE MISSING OR DAMAGED, PHONE, FAX OR MAIL TO OUR CUSTOMER SERVICE DEPARTMENT. FOR EFFICIENT AND SPEEDY SERVICE, PLEASE INDICATE THE MODEL NUMBER AND CODE LETTER OF THE PART NEEDED.

HARDWARE LIST

WOOD DOWEL 12 PCS  ϕ8X30mm (1)	ROUND HEAD BOLT FLAT WASHER SPRING WASHER 16 SETS  ϕ6X32mm (2)	MAGNET LOCK FLAT HEAD SCREW 1 SET  ϕ3X12mm (3)	KNOB BOLT 4 SETS  ϕ3X19mm (4)	IRON SLICE FLAT HEAD SCREW 2 SETS  ϕ3X6mm (5)
HINGE FLAT HEAD SCREW 4 SETS  ϕ3X12mm (6)	SHELF HOLDER 4 PCS (7)	ROUND HEAD SCREW 16 PCS ϕ3X12mm (8)	ALLEN KEY 1 PC  (9)	GLUE 1 PC  (10)

PARTS LIST

BOTTOM PANEL 1 PC 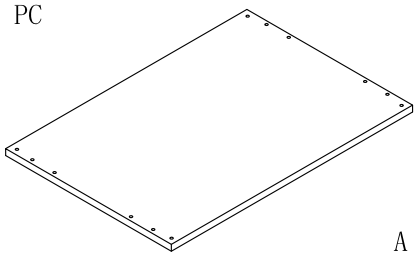 A	LEG 4 PCS B	TOP FRAME 1 PC 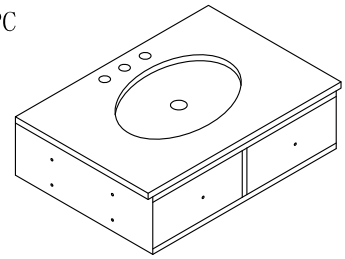 C
LEFT SIDE PANEL 1 PC 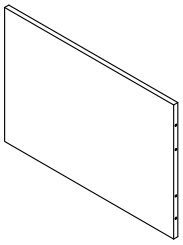 D	RIGHT SIDE PANEL 1 PC 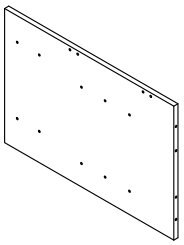 E	LEFT DOOR 1 PC 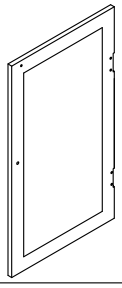 F
RIGHT DOOR 1 PC  G	SHELF 1 PC 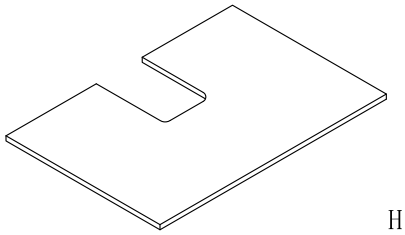 H	BACK PANEL 2 PCS  I

NOTE: THE SURFACE WITH THE STICKER IS THE BACK SIDE.

STEP 1: ASSEMBLE BOTTOM PANEL (A) AND LEG (B)

- FILL RELEVANT HOLES 1/4 FULL OF GLUE, INSERT WOOD DOWEL (1) INTO THESE HOLES. (DETAILS SEE WOODEN DOWEL INSTALLATION PROCEDURE ON PAGE 2).
- USE ROUND HEAD SCREW, SPRING WASHER AND FLAT WASHER (2) TO ASSEMBLE BOTTOM PANEL (A) AND LEG (B) TOGETHER BY ALLEN KEY (9).

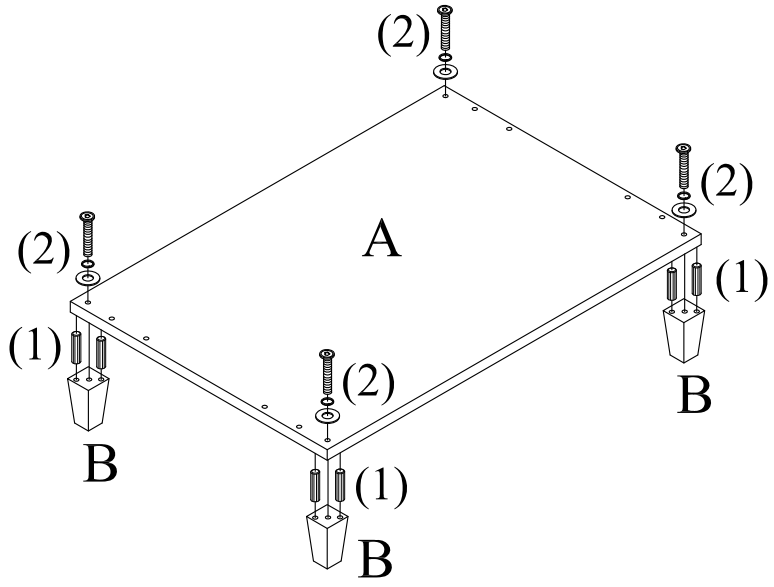

STEP 2: ASSEMBLE MAGNET LOCK (3) AND KNOB (4)

- USE FLAT HEAD SCREW (3) TO ATTACH MAGNET LOCK (3) UNDER TOP FRAME (C).
- USE ROUND HEAD BOLT (4) TO ATTACH KNOB (4) ONTO TOP FRAME (C).

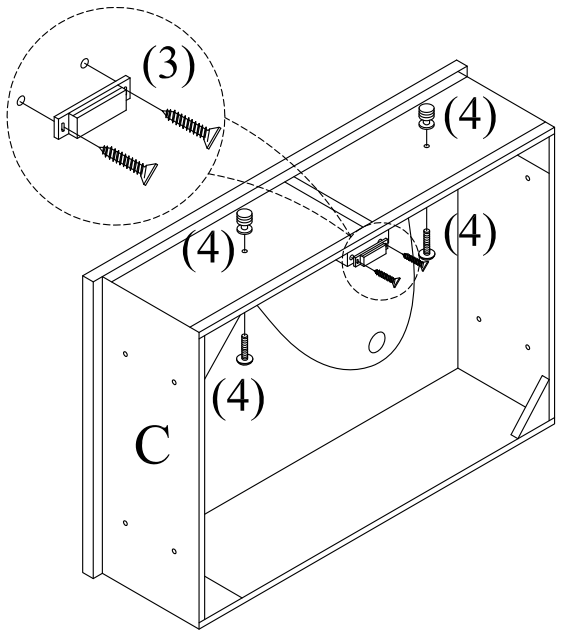

STEP 3: ASSEMBLE TOP FRAME (C) AND SIDE PANEL (D & E)

- USE ROUND HEAD BOLT, FLAT WASHER AND SPRING WASHER (2) TO ASSEMBLE SIDE PANEL (D & E) AND TOP FRAME (C) TOGETHER AS SHOWN.

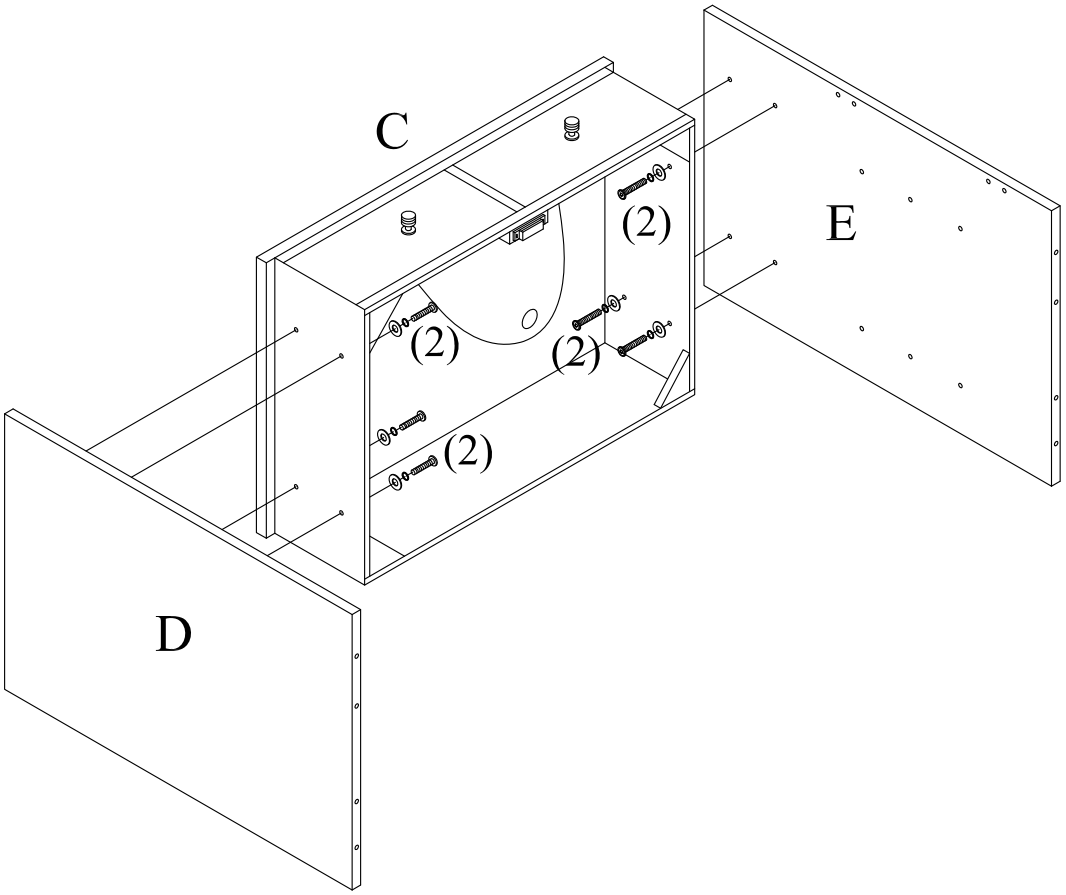

STEP 4: ASSEMBLE BOTTOM PANEL (A)

- FILL RELEVANT HOLES 1/4 FULL OF GLUE, INSERT WOOD DOWEL (1) INTO THESE HOLES. (DETAILS SEE WOODEN DOWEL INSTALLATION PROCEDURE ON PAGE 2).
- USE ROUND HEAD BOLT, FLAT WASHER AND SPRING WASHER (2) TO ASSEMBLE BOTTOM PANEL (A) AND SIDE PANEL (D & E) TOGETHER AS SHOWN.

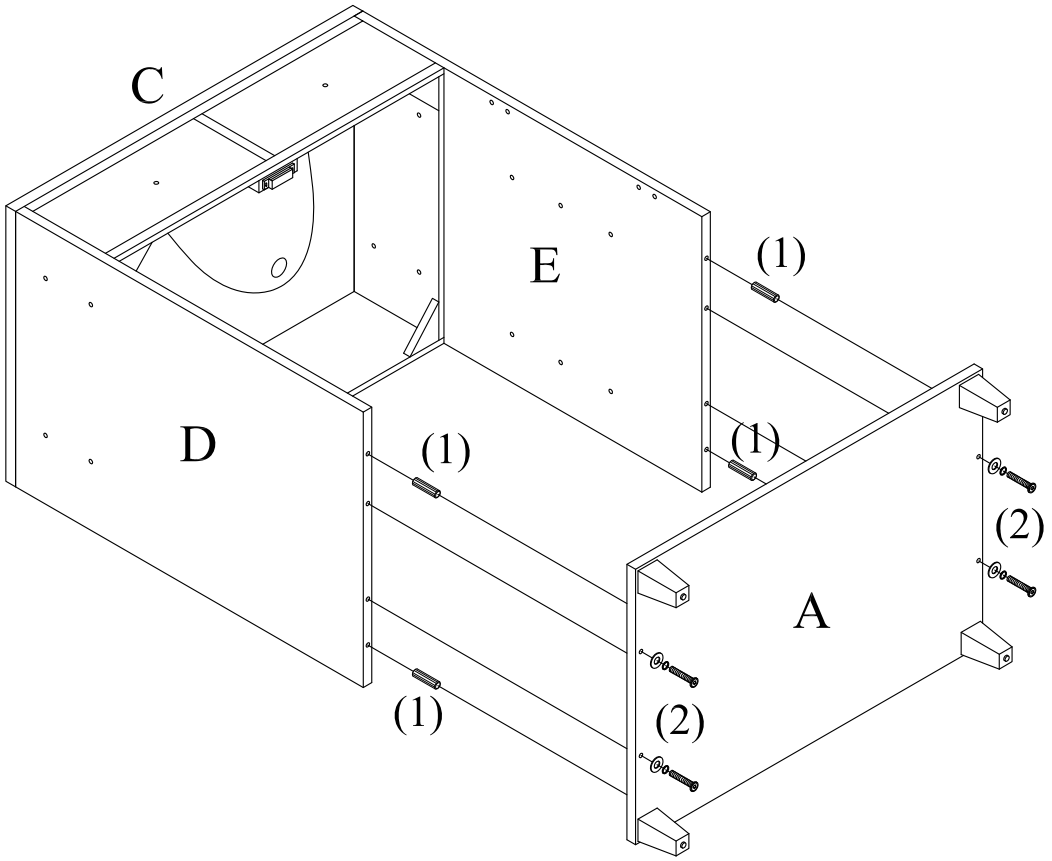

STEP 5: ASSEMBLE KNOB (4), IRON SLICE (5) AND HINGE (6)

- USE ROUND HEAD BOLT (4) TO ATTACH KNOB (4) ONTO DOOR (F & G).
- USE FLAT HEAD SCREW (5) TO ATTACH IRON SLICE (5) ONTO DOOR (F & G).
- USE FLAT HEAD SCREW (6) TO ATTACH HINGE (6) ONTO DOOR (F & G).

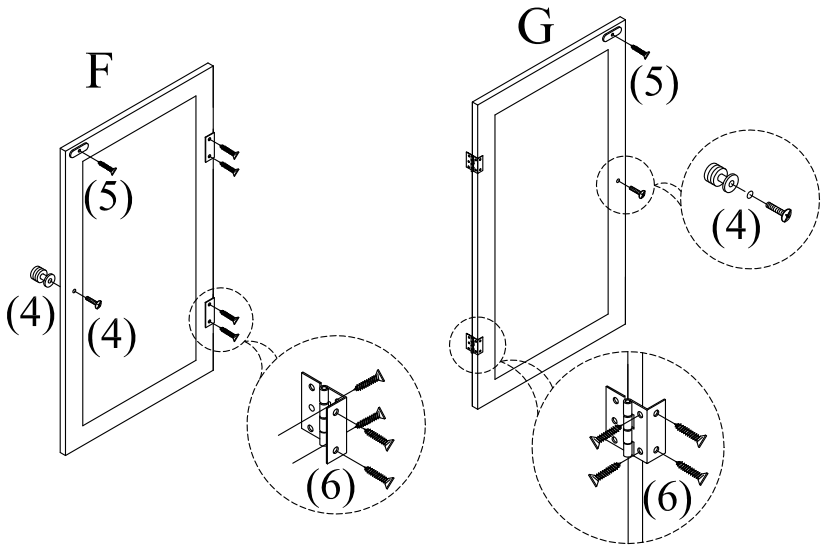

STEP 6: ASSEMBLE DOOR (F & G)

- USE FLAT HEAD SCREW (6) AND HINGE (6) TO ASSEMBLE DOOR (F & G) ONTO SIDE PANEL(D & E).

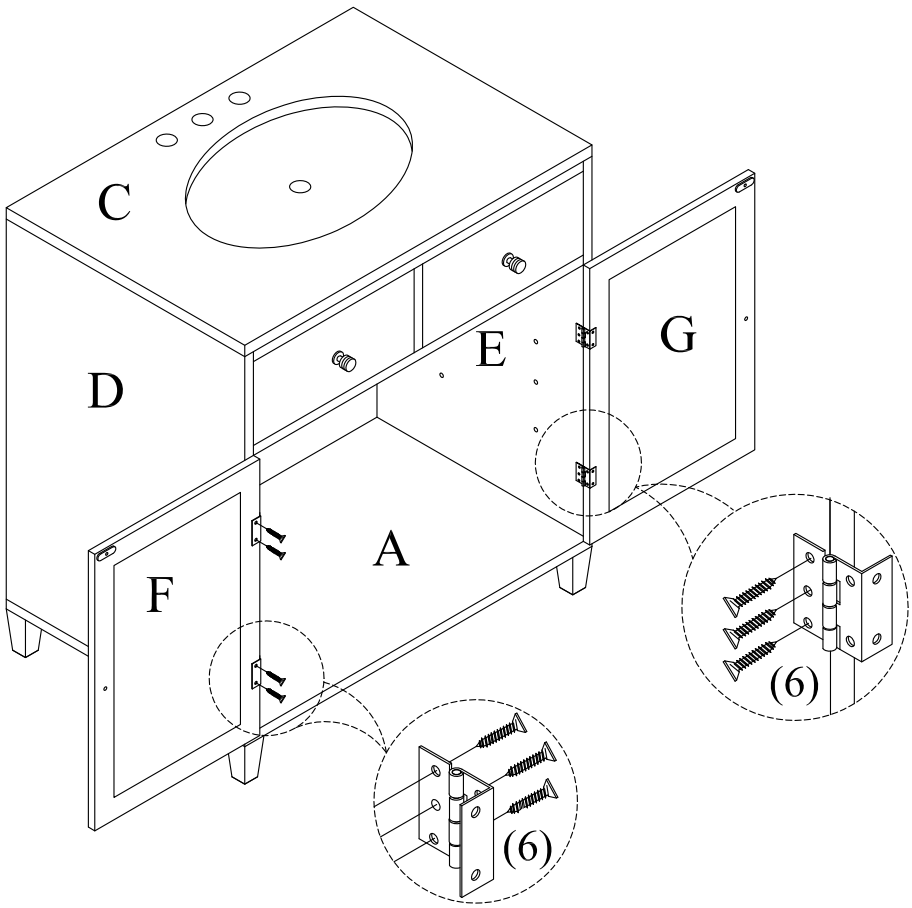

STEP 7: PLACE SHELF (H)

• INSERT SHELF HOLDERS (7) INTO THE HORIZONTAL HOLES INSIDE OF SIDE PANEL (D & E), THEN PUT SHELF (H) ON THEM AS SHOWN.

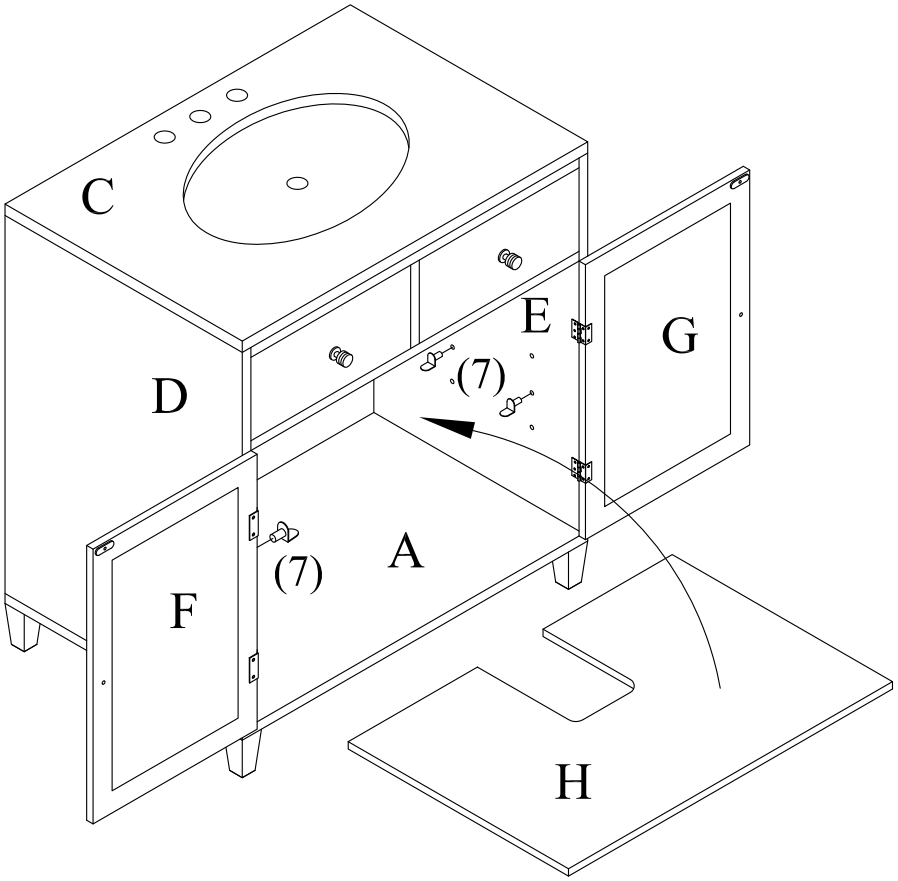

STEP 8: ASSEMBLE BACK PANEL (I)

• USE ROUND HEAD SCREW (8) TO ATTACH BACK PANEL (I) ON THE BACK OF PRE-ASSEMBLED UNIT.

NOTE: BEFORE YOU ASSEMBLE THE BACK PANEL, PLEASE MAKE SURE THE 2 SIDE PANELS AND DOORS HAVE AN EVEN GAP BETWEEN THEM. IF UNEVEN, SHIFT THE SIDE PANELS AND ADJUST DOORS UNTIL EVENLY SPACED, THEN ATTACH BACK PANEL.